



Acer Aspire One 722 Screen Replacement

If you need to replace the screen of your netbook due to a crack or dent, follow this guide on how to replace the screen on the Acer Aspire One 722.

Written By: Christian Barboza



Step 1 — Battery



- Shut the netbook off (Power down netbook at top left corner).

Step 2



- Close the netbook and flip it over so that the back is facing up.

Step 3



- Slide the button below the battery to the right while simultaneously pulling the battery out.

Step 4





- Remove the old battery and get the replacement battery.

Step 5




- Check the thin grooves on the side of the battery entry and line the replacement battery up to that.

Step 6 — Screen

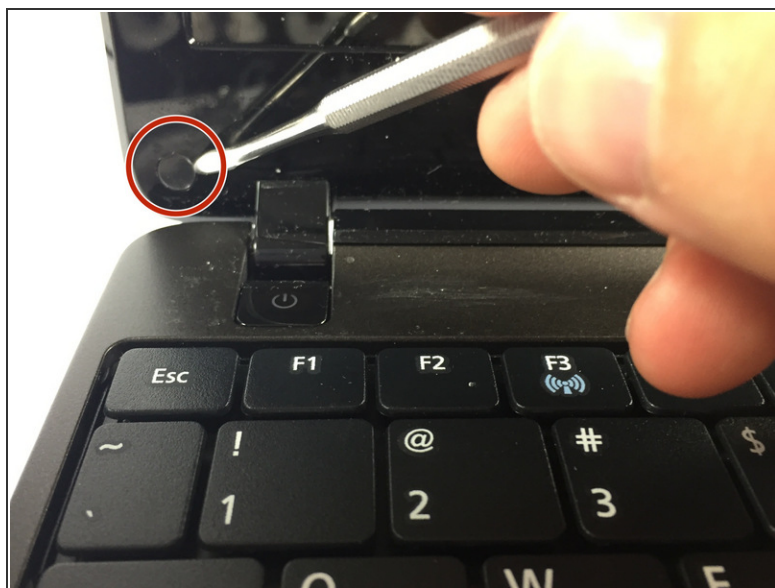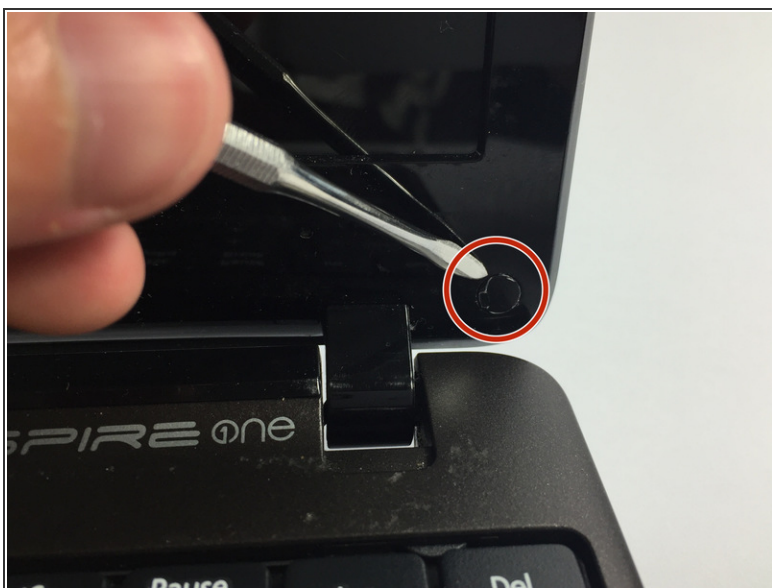

- Remove black rubber clip located on the bottom right and left of the netbook screen. Next, untighten the screws.

Step 7

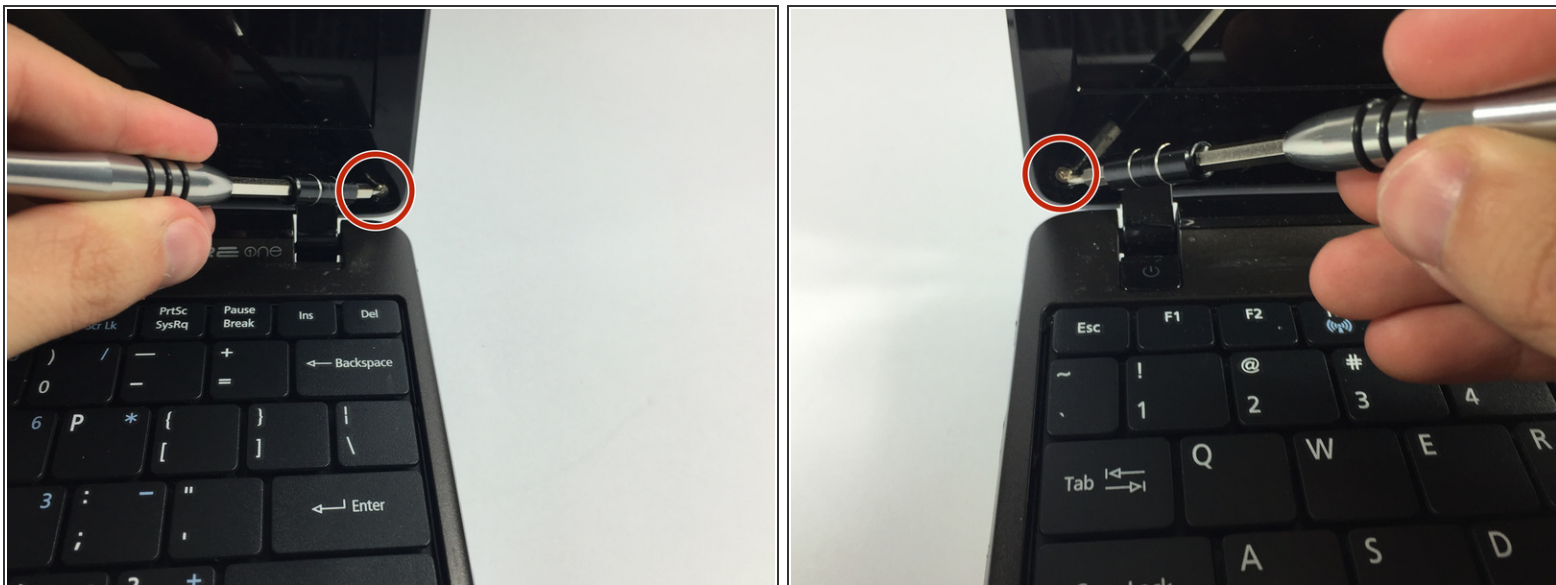


- Remove the screws under the black caps.

Step 8



- Slowly separate the screen casing from the screen.


 Be careful when detaching the screen casing from the screen. If is not done slowly it can break.

Step 9



- Remove the screws located on the four corners of the screen.




Step 10

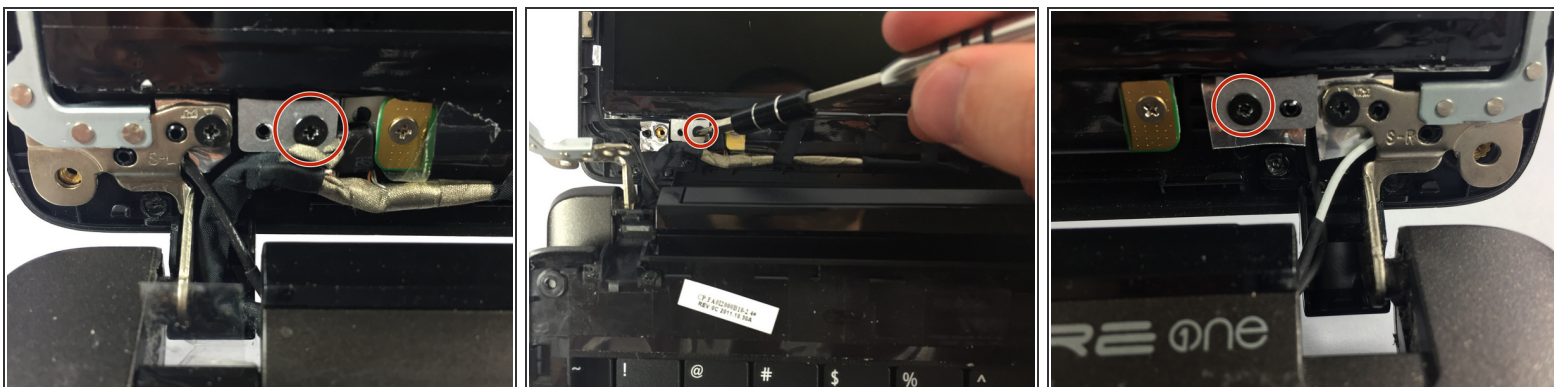

- Remove the two bottom screws.




i Taking out these screws will allow you to remove the screen from its attachment.

Step 11

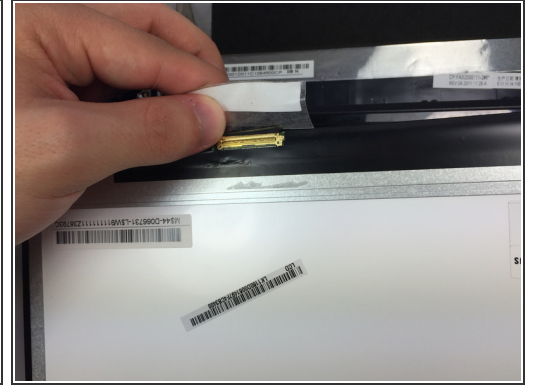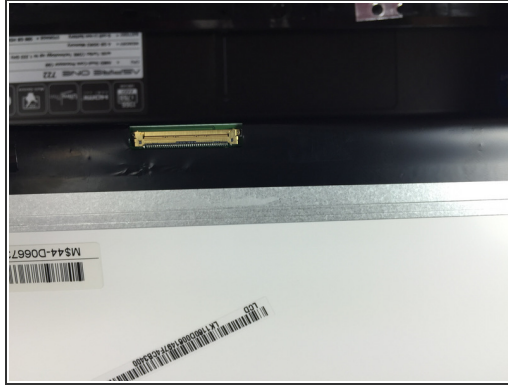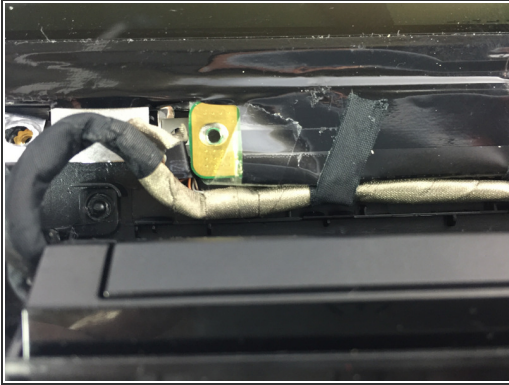

- On the bottom left of the screen there is a cord attached. Remove the tape that is attached to the screen.

Step 12

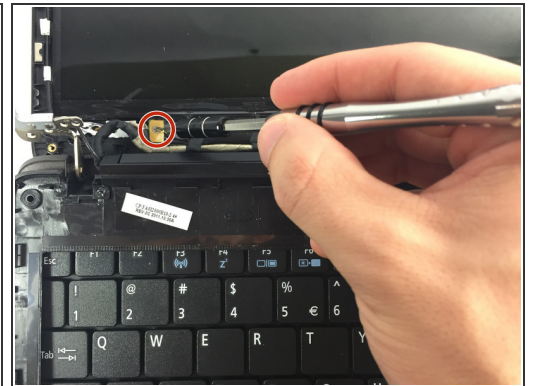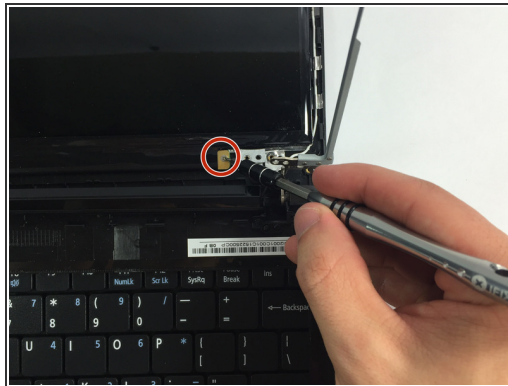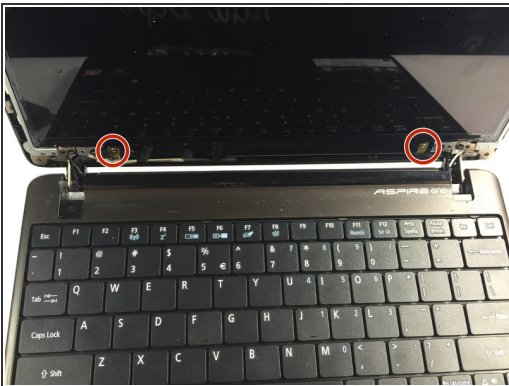

- On the green board, unscrew the two screws.
- Remove the board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:28:54 PM.